


Tailgate Wiper Arm/Blade, Replacing Removal

Rear windshield [wiper blade](#)

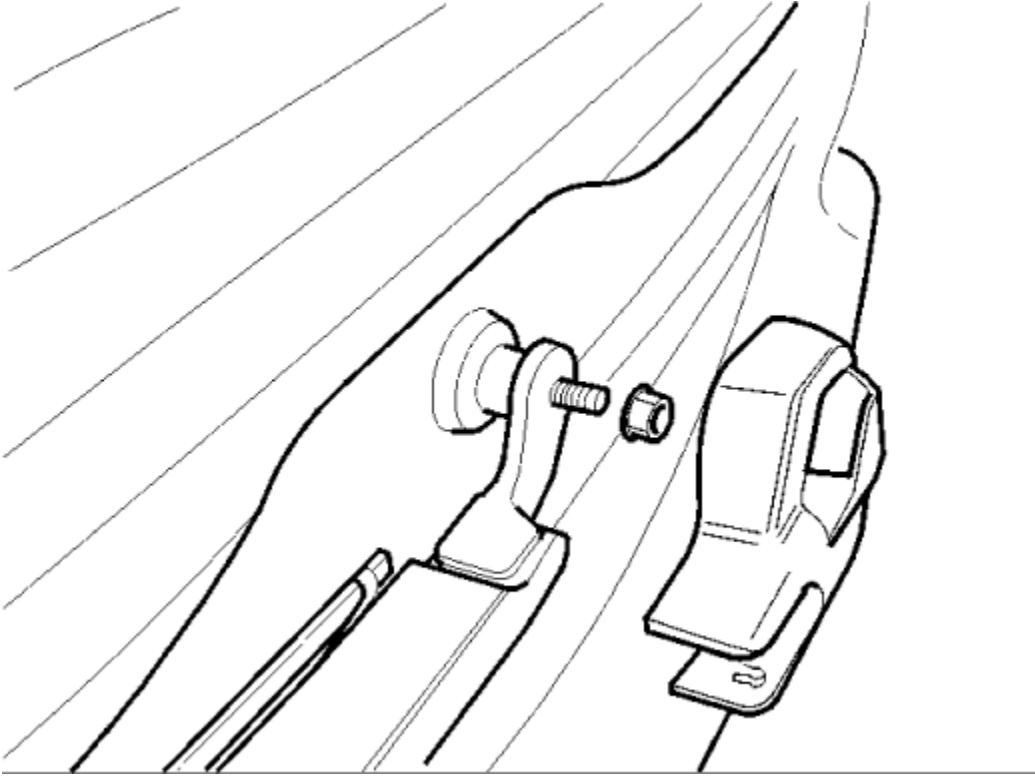


- Fold up the wiper arm
- Turn the blade **90°** towards the arm and pull off the blade.

Rear windshield wiper arm and blade

- Fold up the cover
- Remove the nut
- Detach the arm and blade.

Installation

Rear windshield wiper arm and blade

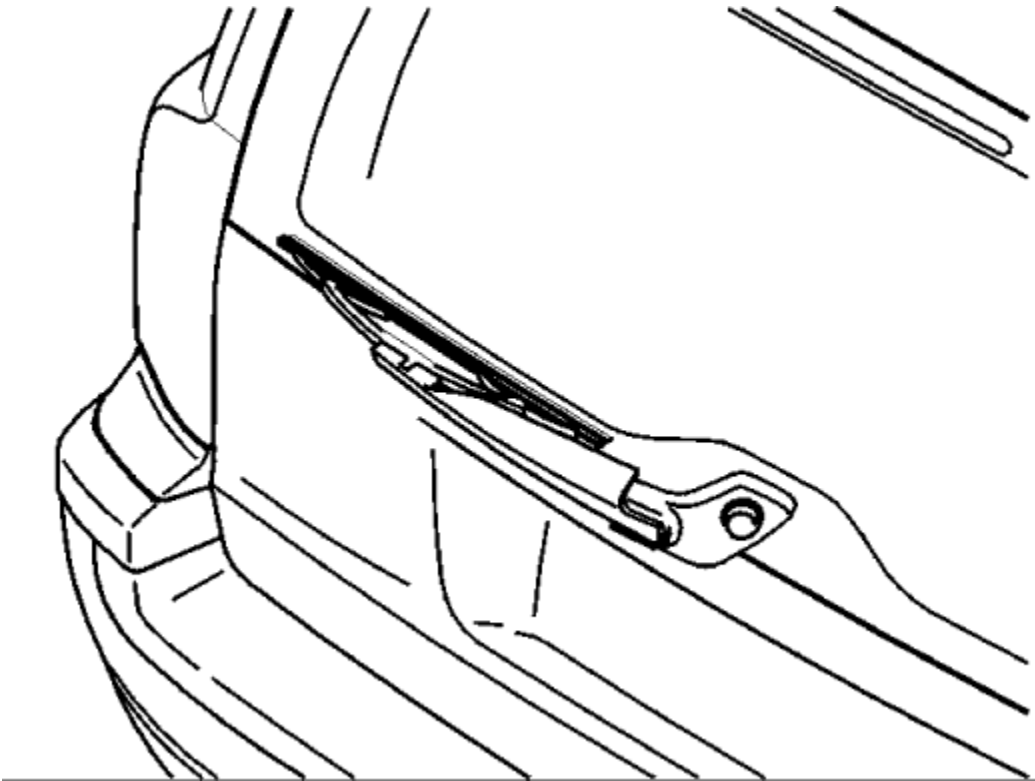

- Reset the motor
- Position the arm with the nut. Adjust the arm so that the blade is in the middle of the black area on the windshield. Tighten the nut.
- Test run the wiper with the washer. Reset the wiper. The blade must come to rest in the middle of the black area on the windshield. Alternatively, if the windshield is dry, approximately **10 mm** below the top of the black area.

Rear windshield [wiper blade](#)

- In reverse order. Tighten to **14 Nm** .