

Pics and process to install / remove 3rd row seat belts

This assumes you have the 3rd row seat belts in place and wish to remove them and install the steel guard.

First remove the plastic cover in the roof area of the cargo bay on each side, you will need a torx type bit size 20 I think.



Pull the plastic from the other end to the torx a little bit of a tug and it will just fall out and then this is what you will see...





Now in the picture above you need a 14 or 15mm to undo the nut. Be very careful not to drop it as it comes out as it always rolls off somewhere difficult to find! After it is out the belt will still remain up as there is a small catch you just need to move up and sideways for the belts to drop to the floor. That's it done, you are now ready to put in the steel guard.

The trick here is to ensure the seats are folded forward (see last picture) otherwise you will not get the guard in.

When putting in the guard put one end and then push sideways towards the end that is already in, so in the picture below my left hand is pushing to the right to push away from the socket so you can position it then once lined up release the pressure so that it goes into the socket.



Picture below shows guard install afterwards and with seats forward and how you need to start when removing it and to get the seat belts in place again which is just the reverse of the above.

