

## Rear Brake Discs


### Brake Disc Rear, Replacing

**NOTE:** The illustrations in this service information are used for different model years and/or models. Some variation may occur. However, the essential information in the illustrations is always correct.

#### Removal

#### Removing the brake disc

Remove:

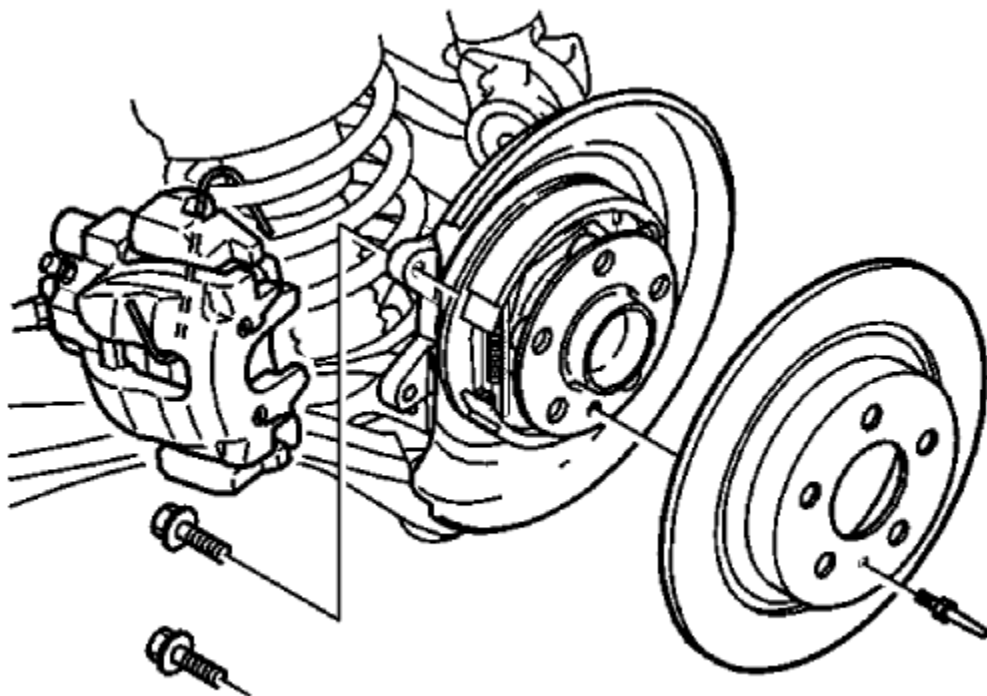


- the wheel
- the 2 mounting screws for the [brake caliper](#) holder. Hang the brake caliper from the spring using a wire
- the locating pin and the brake disc.

**NOTE:** In some cases the parking brake adjustment must be released in order to remove the brake disc.

Remove the panel covering the [parking brake lever](#).

Release the parking brake adjuster.

## Cleaning and checking

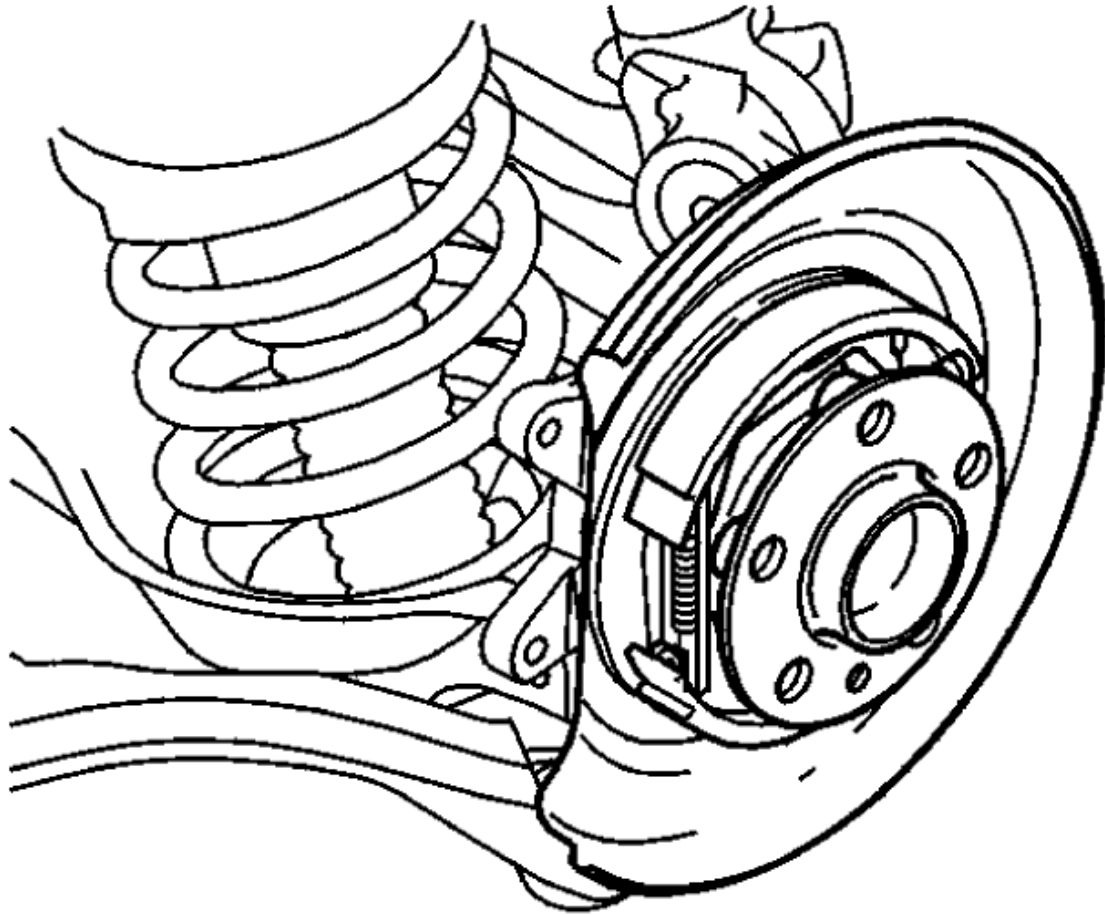

**NOTE:** Cleaning is important to prevent lateral run out at the brake disc.


Clean the hub flange before installing the new brake disc.  
Check the hub. If it is damaged, measure the lateral run out.  
Check the [brake pads](#).

## Installation

### Installing the brake disc

**NOTE:** Be careful when handling the new brake disc. Careless handling can cause damage to the brake disc (out-of-true).

#### Install:

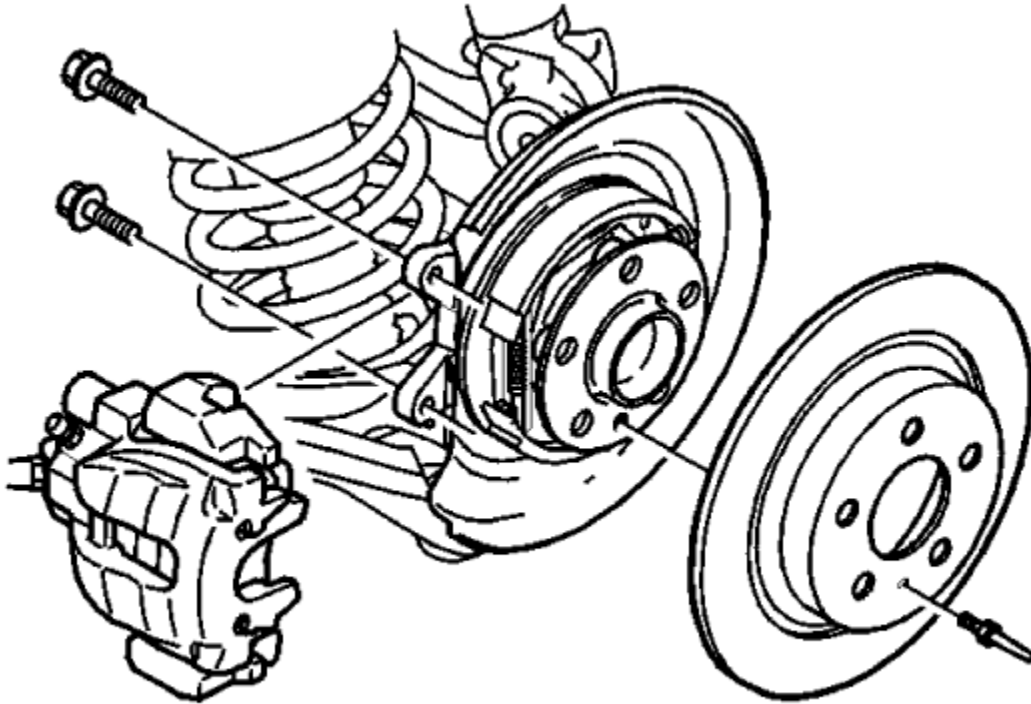

- the new brake disc. Tighten the locating pin.
- the caliper holder. Use 2 new mounting screws. Tighten.

Depress the brake pedal a few times. Check the fluid level in the [brake fluid](#) reservoir. Top up if necessary.

**NOTE:** The parking brake must be adjusted if the parking brake adjustment was released.

Reinstall the panel covering the [parking brake lever](#).

### Finishing

Install the wheel.