



## Glove Compartment, Replacing

- Remove the soundproofing panel on the passenger side.
- Open the glove compartment.

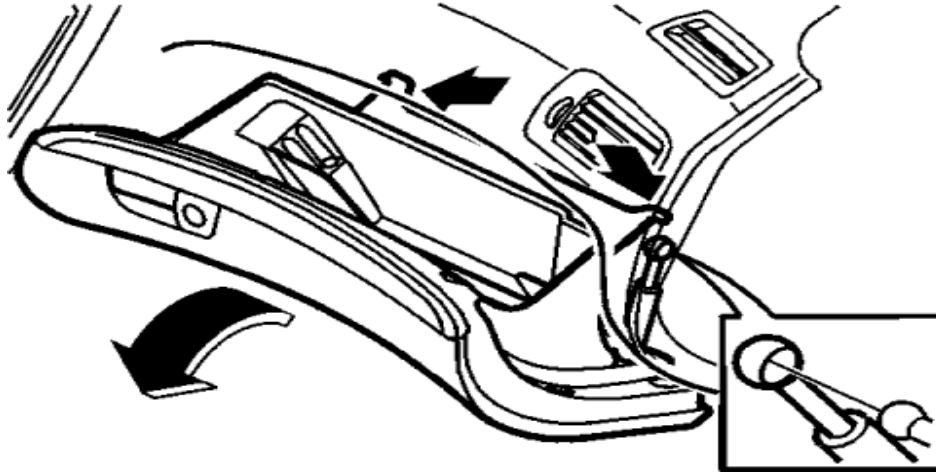

- Slide the two hooks on each side past the tabs. Remove the gas strut by pulling it straight out.

### Remove:

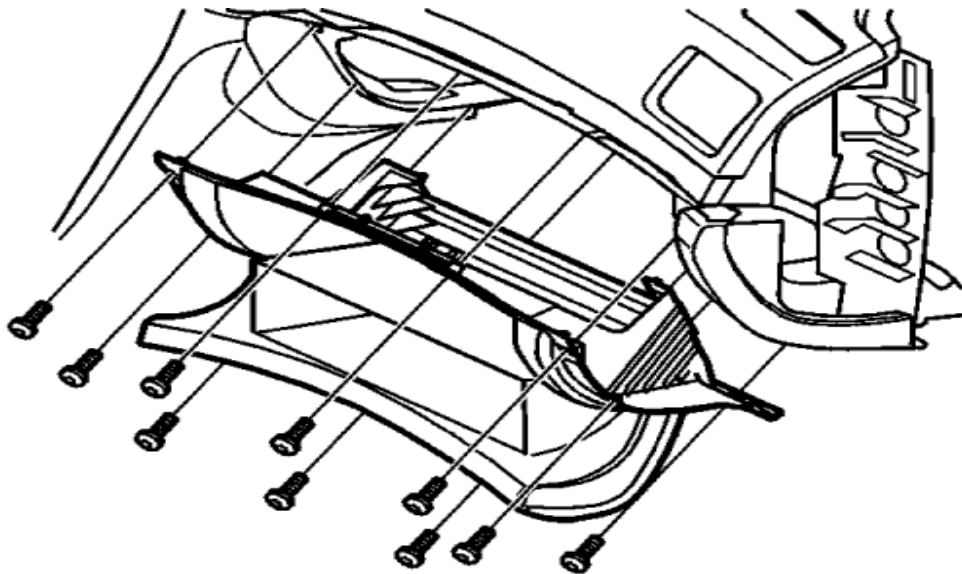

- ten screws

- the connector for the glove compartment lighting
- the connector for the foot well lighting
- the glove compartment.

**Install:**

- In reverse order.

Transfer those components that do not need to be replaced.